




### Installation Process

### Electric tail gate lift system

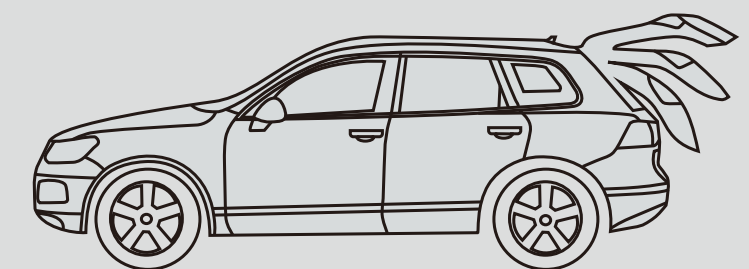

NO:5658033010000


#### NOTE

##### Installation Precautions of Electric Tail gate Lifts

- To ensure safety and normal usage of our products, please let the professional sales staff to install; to avoid damaging the machine or causing accidents, please do not dismantle the products.
- To start the engine before installation, check the car dashboard display function, whether the buttons operate normally, whether there is any scratches on car interior and surface. If any problems, reflect to the customer immediately.
- Check whether the tailgate can normally open and close or not, check if there is any problem with the lights.
- Turn off the engine, prepare tools.
- For installation personnel: please remove metal objects and any other hard objects to prevent car damage during the installation process.
- Remove automotive components and place them carefully to avoid scratching the dashboard; wiring debris need to be tidied up in time, do not leave them in the car; Joints must be well insulated to prevent short circuits.
- According to our wiring way, to avoid affect the car moving parts, such as steering column, the accelerator and brake pedals, etc., each harness should be fixed after wiring, to avoid getting loose.
- Connect each harness according to our wiring way (pay attention to the position of ground wire).
- Do not change the wires or accessories with the power on.




▲After installation, close the tail gate manually, so that the system can initialize.

#### Wire definition

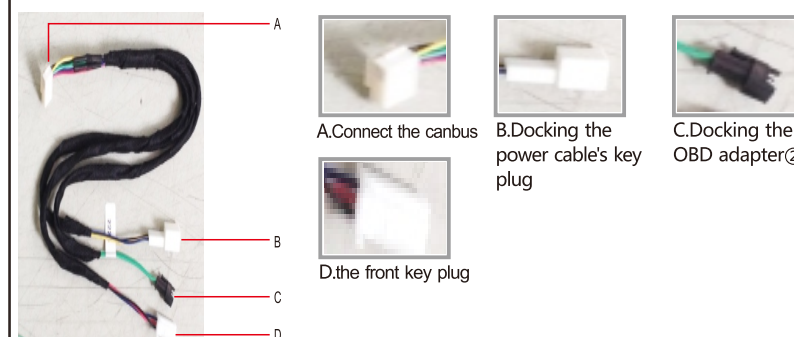

▲All above is subject to change without prior notice. All rights reserved.

#### Wire definition

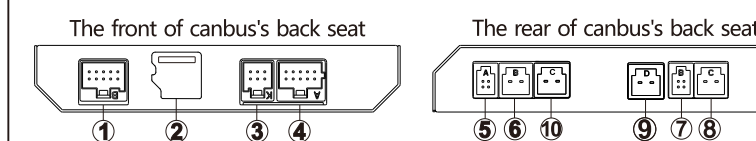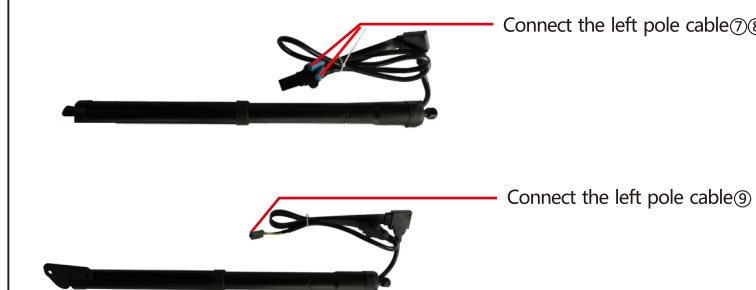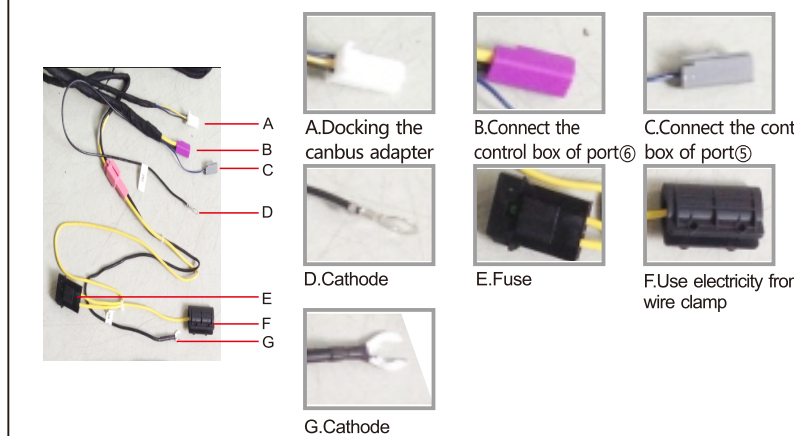

▲All above is subject to change without prior notice. All rights reserved.

#### Installation steps

- The appearance of the Hyundai Tucson.
- The original tail gate.
- Remove the tailgate middle's trim plate.
- Use a special tool remove the tail door's left and right sides plate.
- Use a cross screwdriver to remove the screws of tail door's both sides plate.
- Use a special tool remove the tailgate handle.
- Use a special tool remove the tailgate big trim plate.
- After remove the tailgate trim plate.

▲All above is subject to change without prior notice. All rights reserved.

#### Installation steps

- Confirmed case of the tail gate supporting security, remove the original car gas spring class (left and right sides are the same).
- Dismantle the original ball studs (both the left and the right ones)
- Mount our ball studs, gasket and tray
- Install the left and right sides poles on the original car bracket and tailgate's ball end.
- Install the main control box on the left rear door.
- The pole power line through from the original car line hole.
- The connected control box line through from the driving seat's left side along the root.
- Line along the back seat's left side to the rear trunk.

▲All above is subject to change without prior notice. All rights reserved.

#### Installation steps

- Line along the tailgate's left side.
- Use a special tool to dismantle the latch
- Mount our suction latch, fix the driving box to the left of trunk
- Wiring route: the wire does along the left plastic tape from the bottom of trunk to the tail gate
- Punch on the engine switch range, and install the front tailgate's key.
- Remove the original back button cover and install the standard back button.
- Use cables to connect the power supply in the middle of fuse box of the steering wheel.
- The position which host placed

▲All above is subject to change without prior notice. All rights reserved.

#### Installation steps

- After install the rear door trim panel, the installation is complete.

▲Remote operative mode of the original car. Long press on the trunk button